





2 Specification


Data of Gas Blowback Pistol			
Name	CA1911A1		
Weight		1kg	
Barrel Length		112mm	
Barrel Caliber		6.08mm	
Pellet Capacity		24+1	
Pellet		6mm BB	




3 Operation



Gas Injection

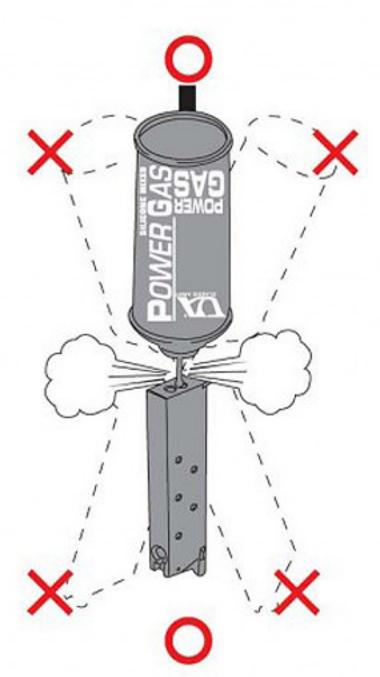


To refill the gas with the gas container in vertical position.

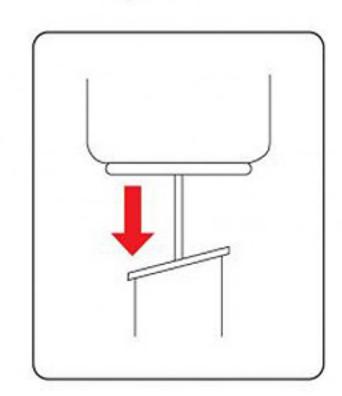



Be careful! The releasing gas is harmful to your eyes and face. Avoid facing the magazine directly when you try to release the gas by pressing the release valve.

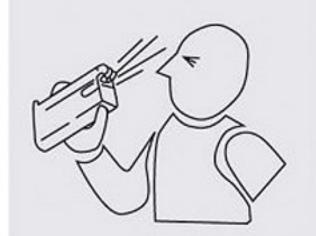



Loading BB Bullet


High precision BB pellets is required for the operation of this magazine. Avoid invasion by dust and dirt into the magazine to prevent malfunctions.

 Load BB pellet in the magazine, 6 mm (15 rounds only). Please follow the illustration diagrams to load the BB pellets.



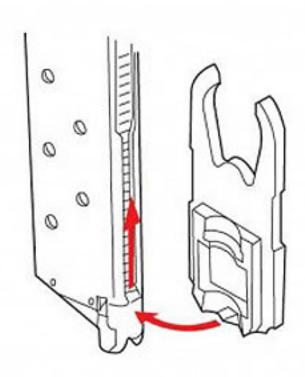



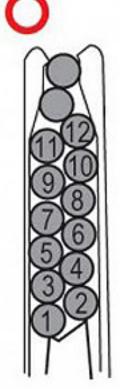



CAUTION Never use any used BB pellets


Please don't use the BB pellet which is not completed.




Please don't use the broken BB pellet.




Please don't use the BB pellet which diameter is exceeded 6 mm.

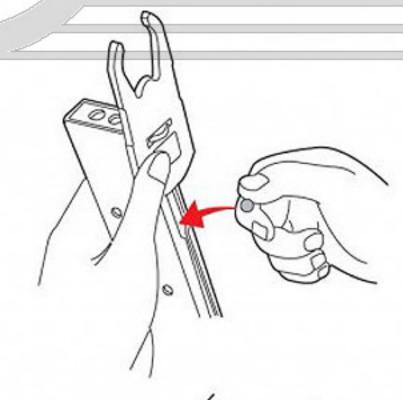

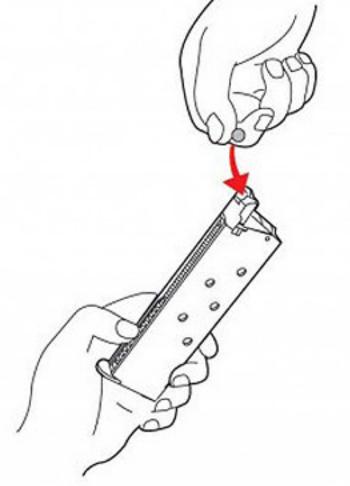




Do not compress and release the magazine spring without BB pellet is loaded. It may be damage the magazine.

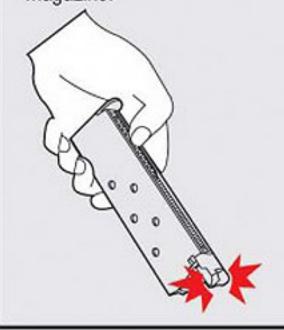

6 Loading & Releasing The Magazine

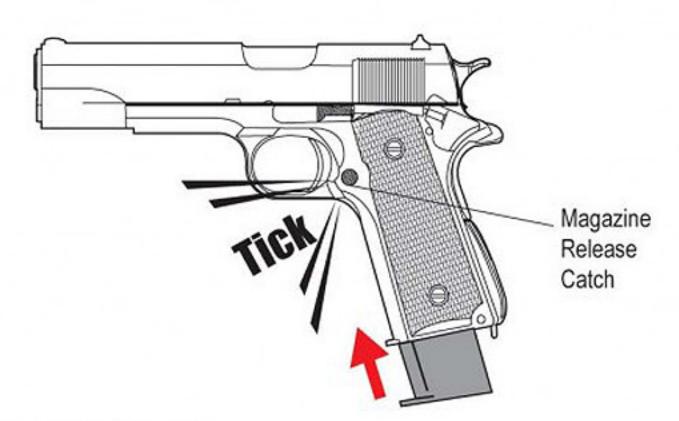


While loading the magazine, push it inward to the bottom till a "tick" sound is heard. Press the magazine release catch, the magazine will fall off from the stock.



down to the ground.

First Load For Firing

1. Pull the slide backward to a specific position.

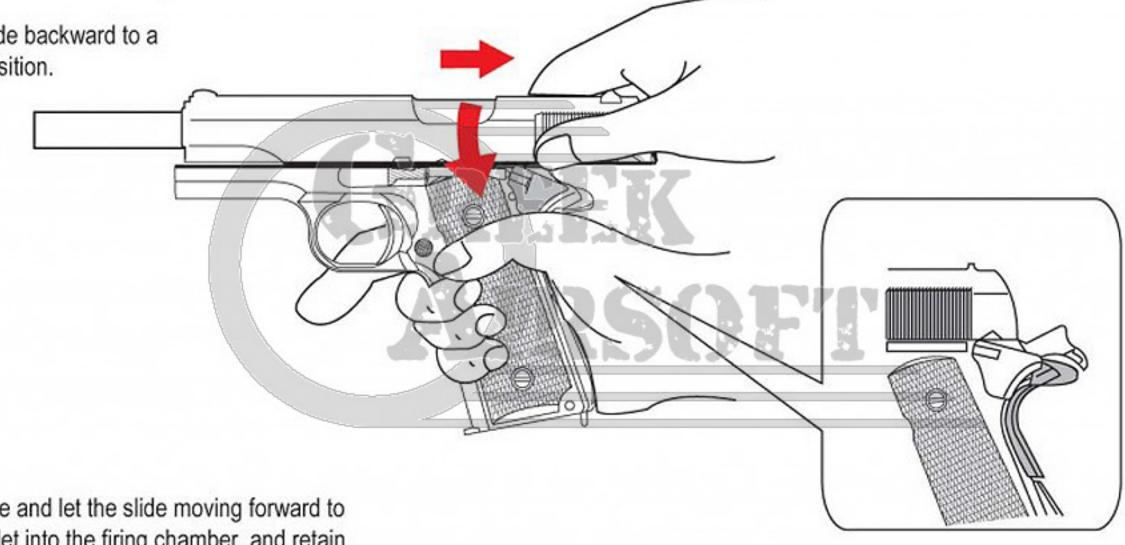


2. Then release and let the slide moving forward to load the pellet into the firing chamber, and retain the hammer at the rear position, ready for firing.

Safety Operation




Don't pull the trigger if the Grip Safety hasn't been pushed in, otherwise it may be damaged.

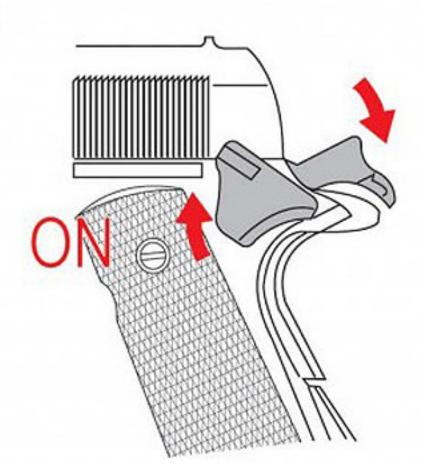


Hammer can only work when the safety switch stays at "OFF" position. Don't operate the trigger when the safety switch is at "ON" position. Otherwise, the pistol may be damaged.


Under this state, the safety switch is at "OFF" position.

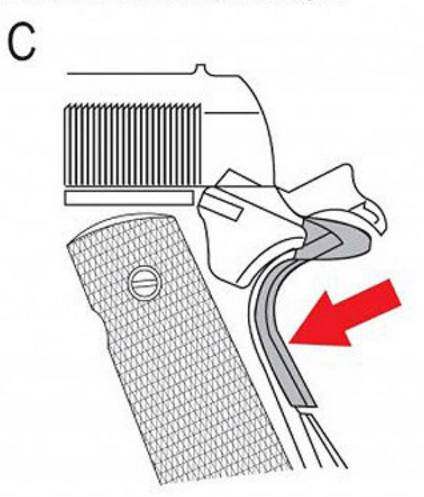

 
Grip Safety function can be applied automatically and grip the apron block tightly to release it.






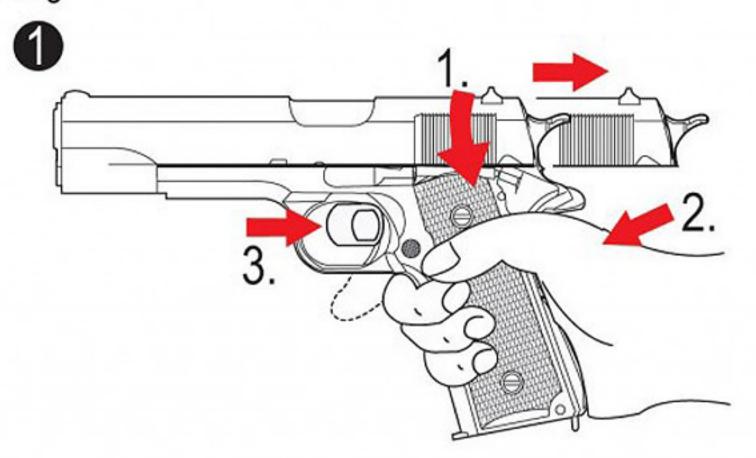


When the slide is pulled back and released forward. The BB pellet is loaded in the firing chamber, press the trigger to fire the loaded BB pellet.

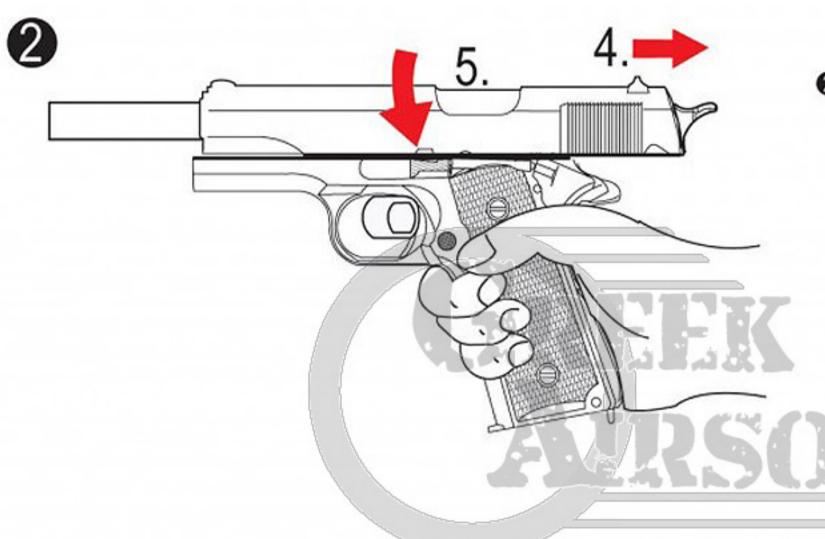


After the last BB pellet is fired, the slide will be retained in the back position, it means an empty magazine condition. If you want to resume the firing, insert a new fully loaded magazine; press the slide lock to release the slide and to reload the BB pellet.

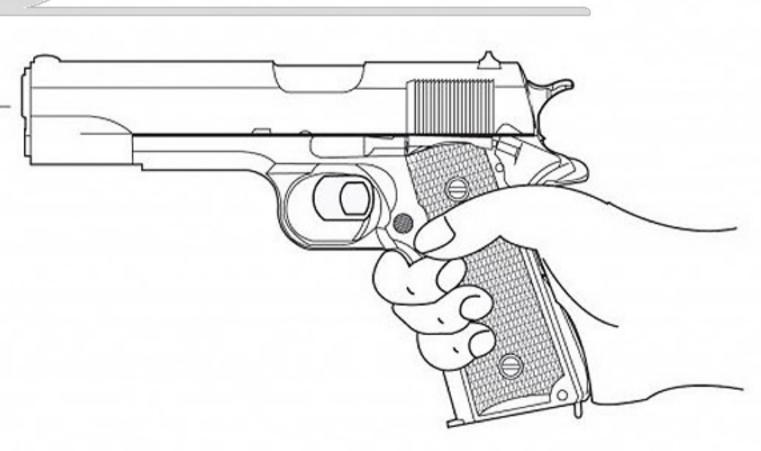

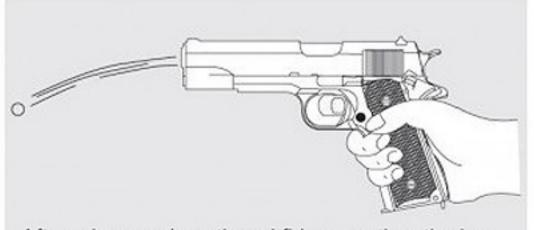


After a long and continued firing practice, the low temperature of the magazine will cause a reduced gas pressure as well as the low velocity of pellet. It is a normal condition and not a trouble. Never practice the reverse firing because which action causes the gas can not evaporate and the vaporized gas easy to damage the parts.

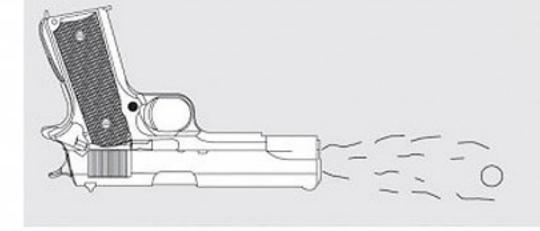





Application of HOP UP


1. The adjustable HOP UP system can make the trajectory of BB pellets slightly adjustable, and compared with the launcher which makes pellets moving at a parabola trajectory, it can aim at a farther target and shoot the pellets for a long range. Unlike the fixed one, the HOP UP turntable and HOP UP Pole can be adjusted slightly by a light touch. It is a wonderful HOP UP system.

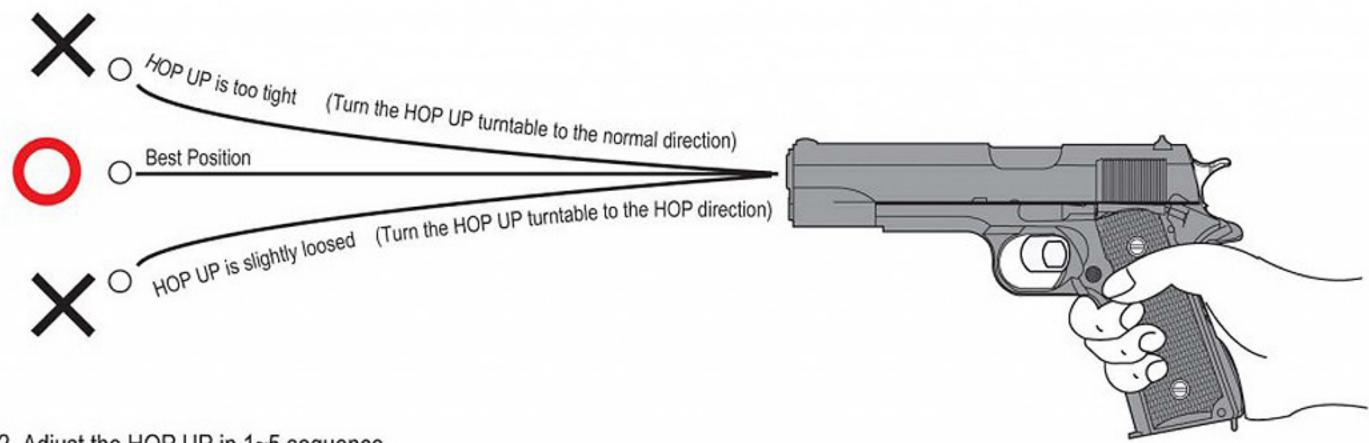

- 2. Adjust the HOP UP in 1~5 sequence.
 - Turn the HOP UP turntable slowly towards the "HOP" direction till the BB pellets can be shot horizontally.
 - Too tightness will cause a poor shooting, so, complete the adjustment till the trajectory is horizontal.
 - Forceful turn of the HOP UP turntable to a certain degree may cause damage.

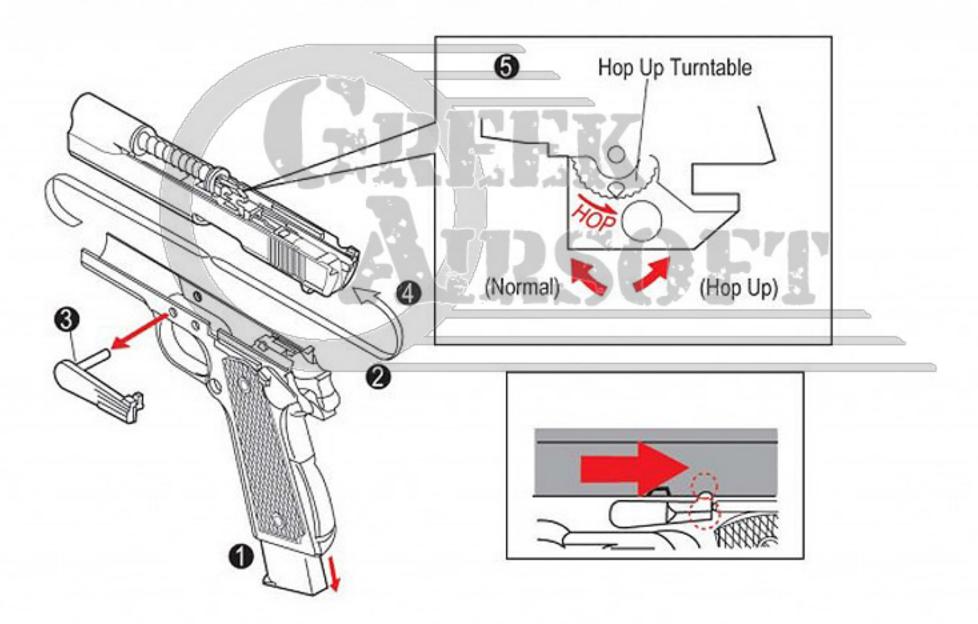

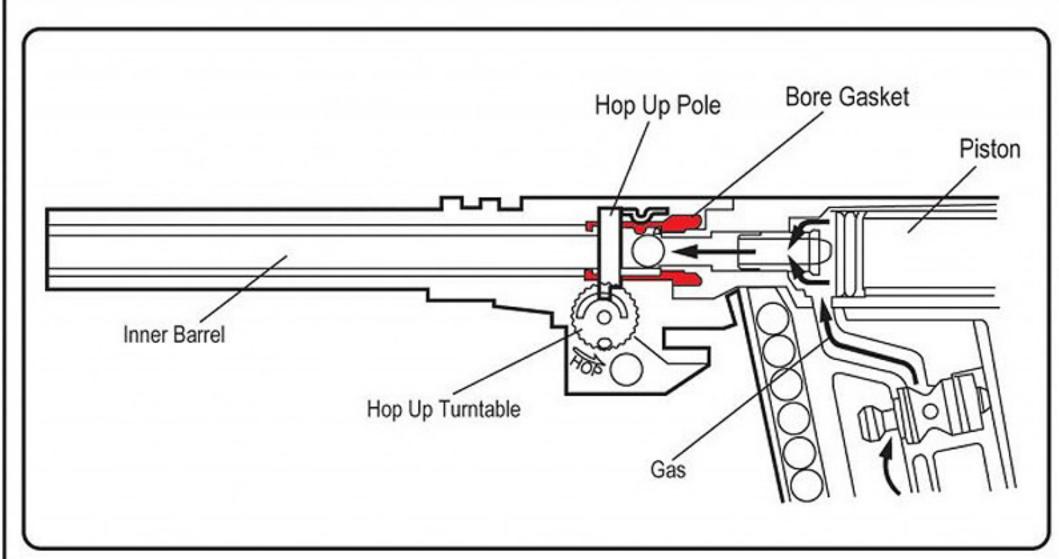

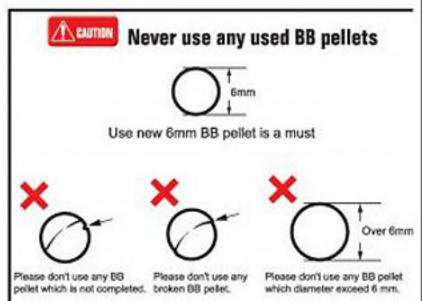






4 How to disassembly the pistol for basic maintenance

1 Detach the magazine first.


Press the slide release button and push forward the slide.

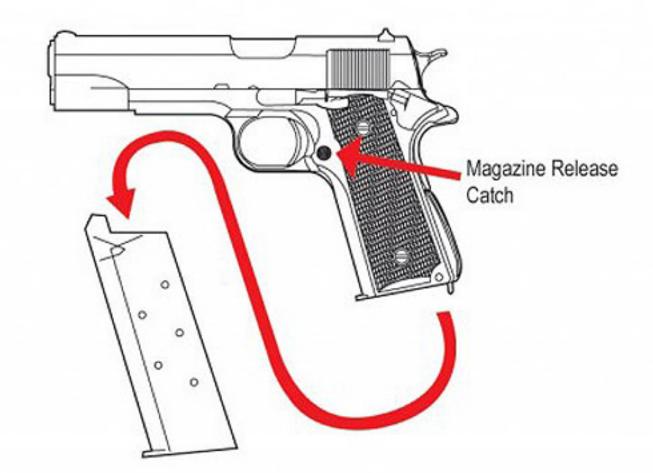

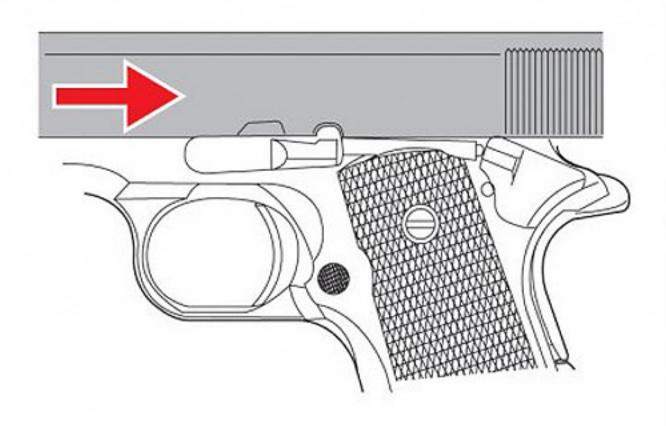


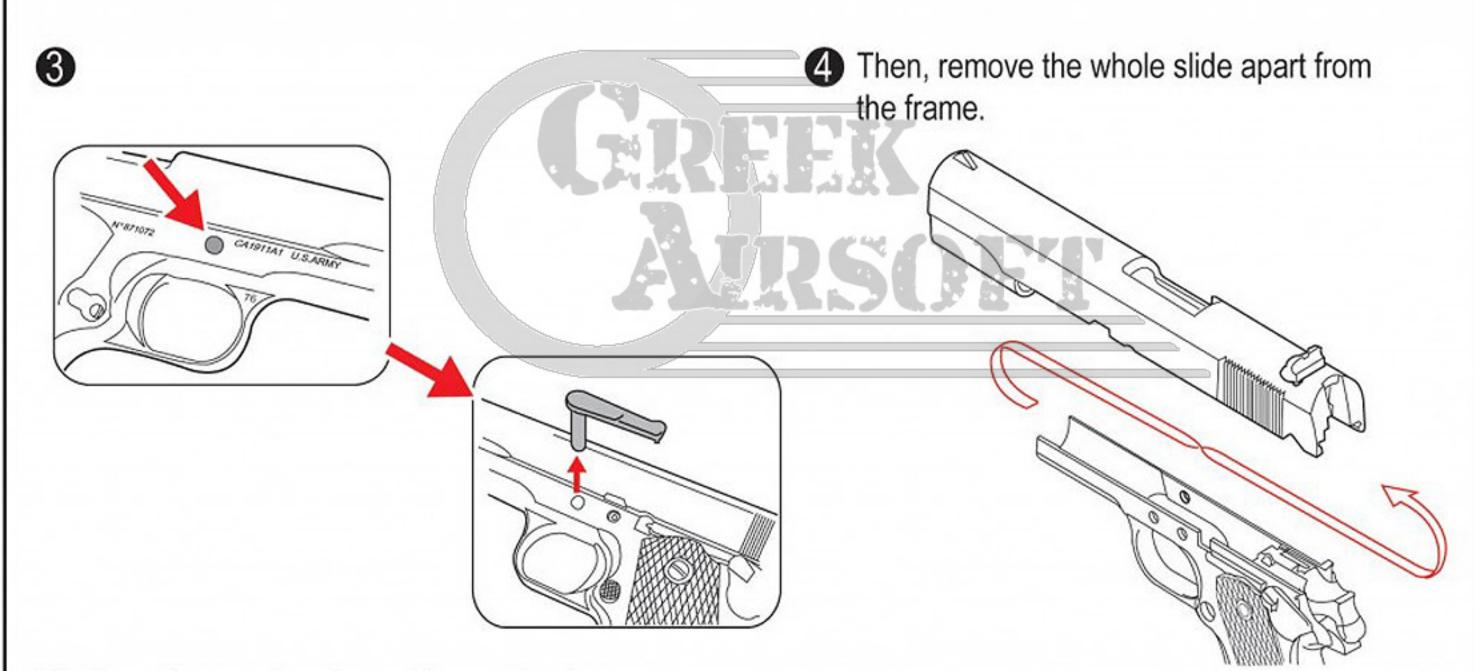

6 Press the recoil spring rod forward and remove it from the slide.

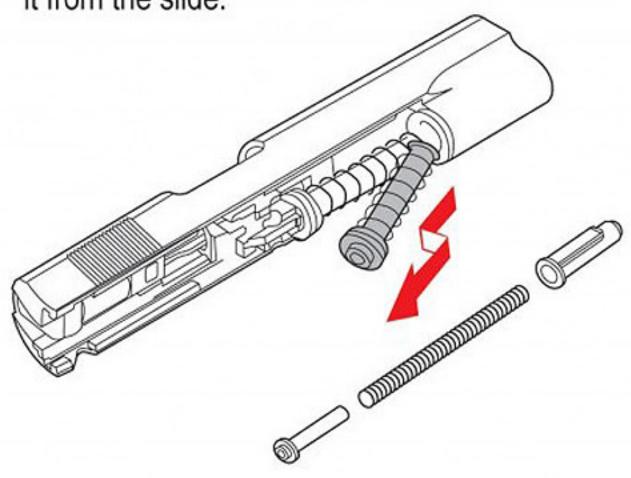




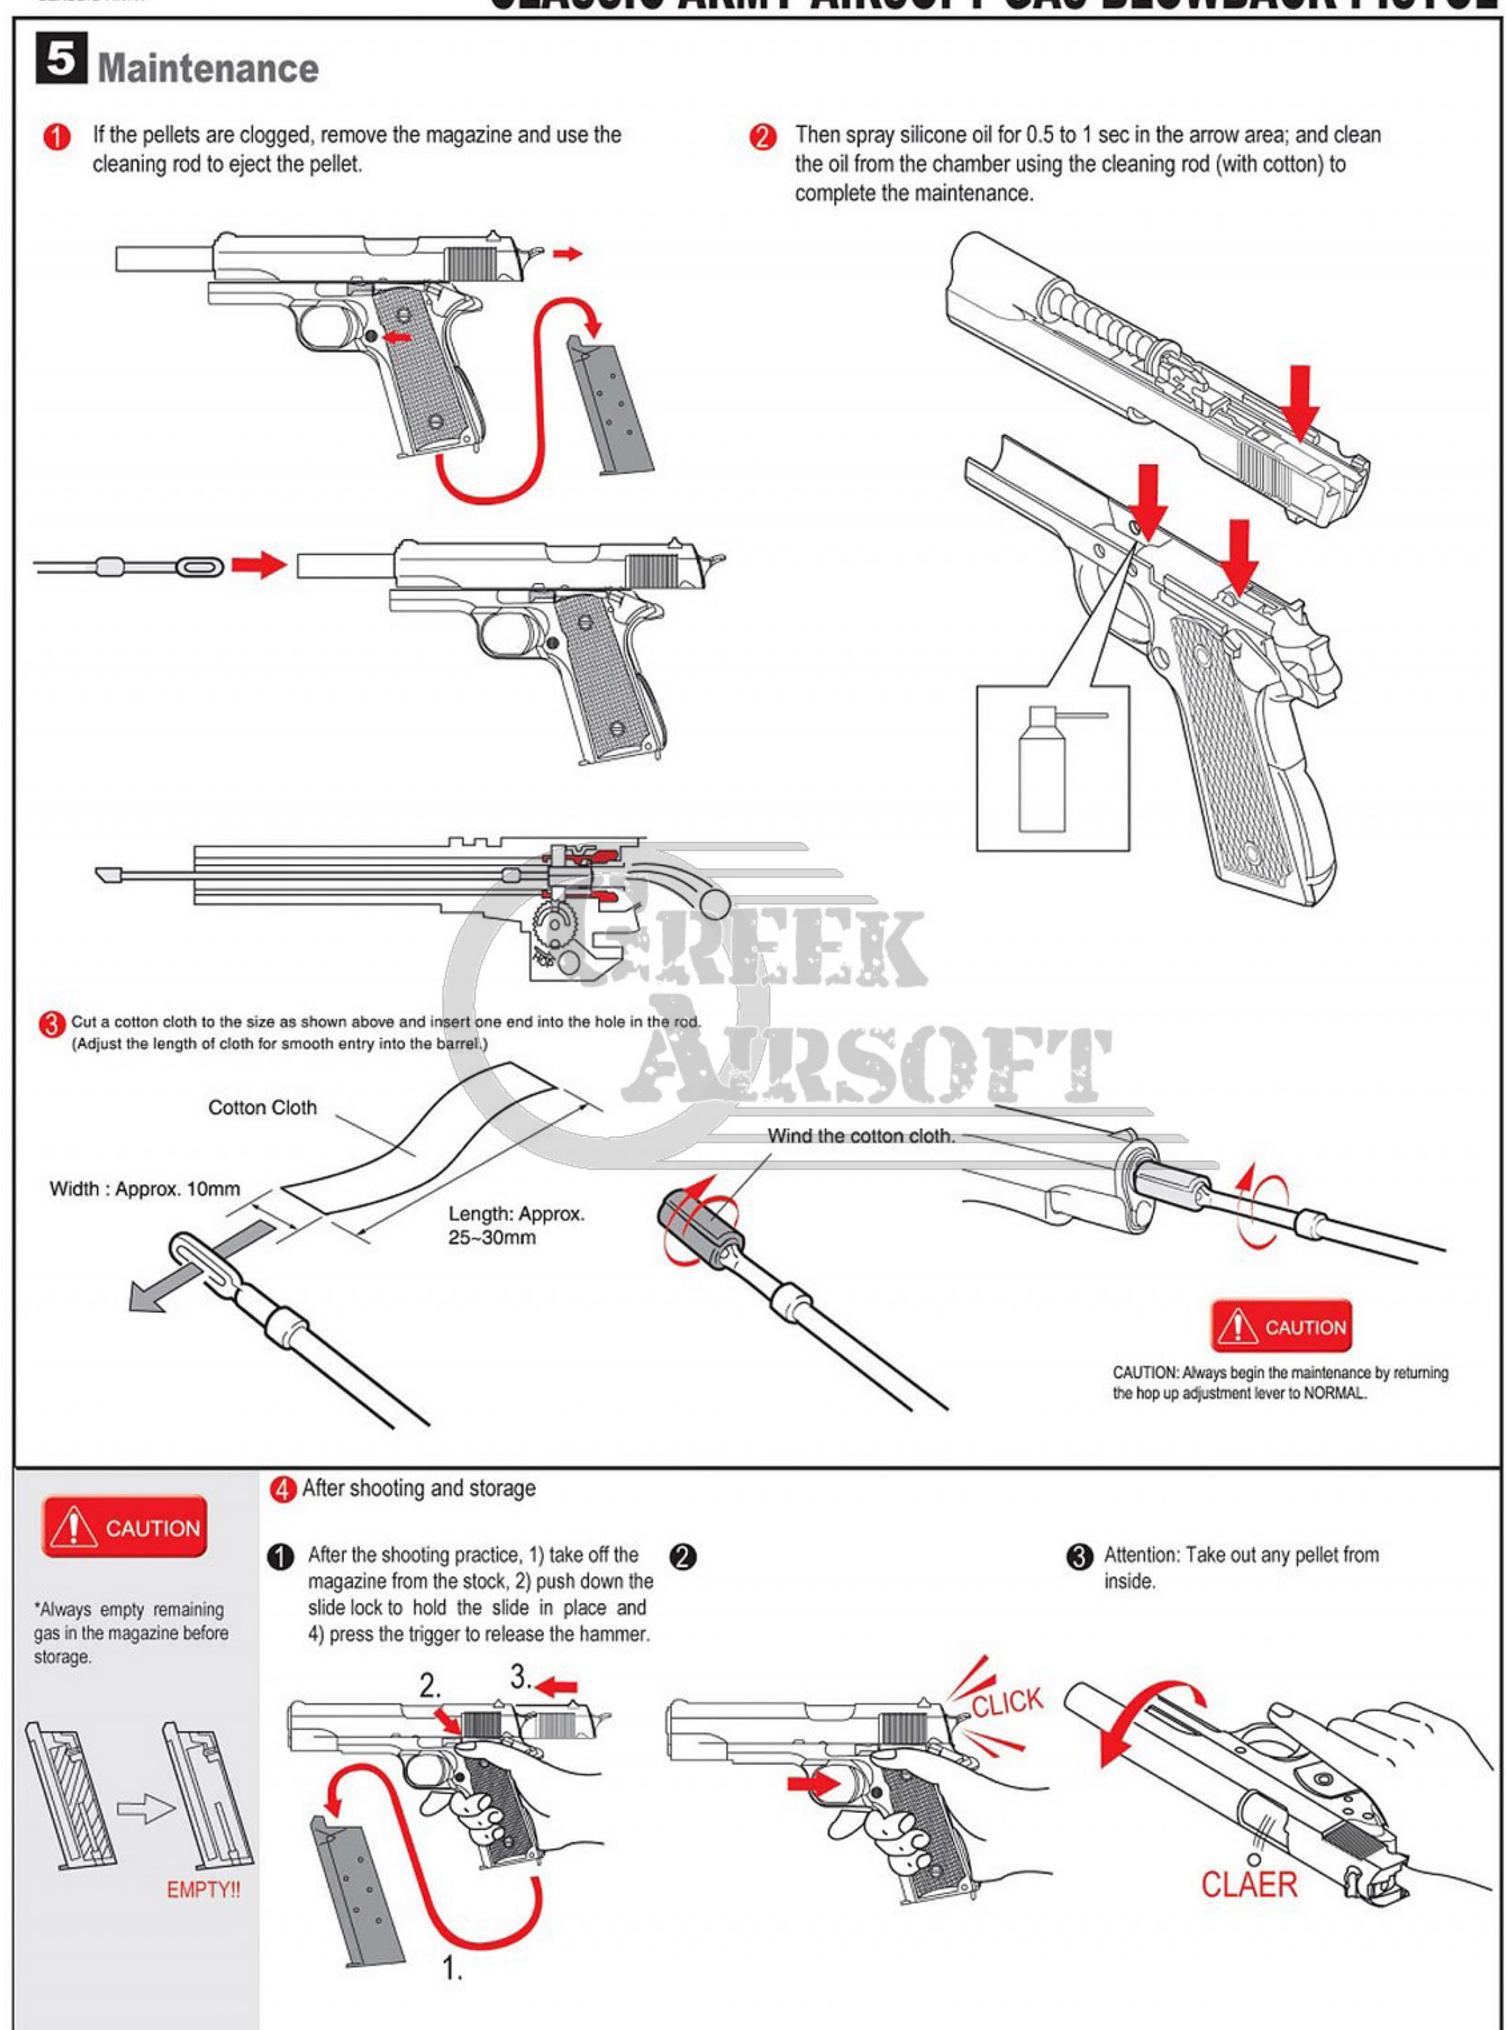



6 NWARNING

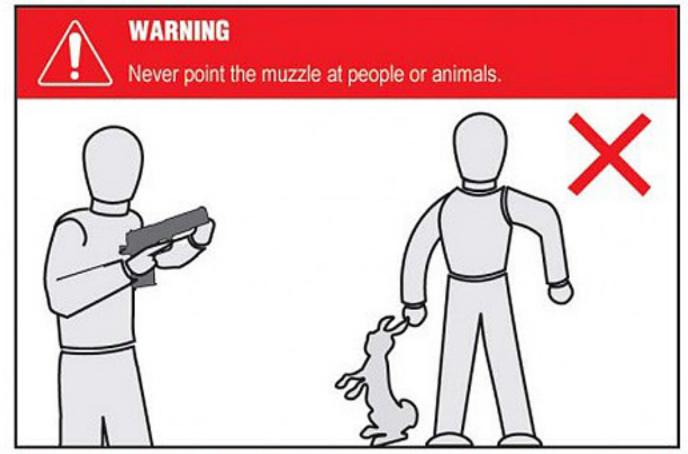












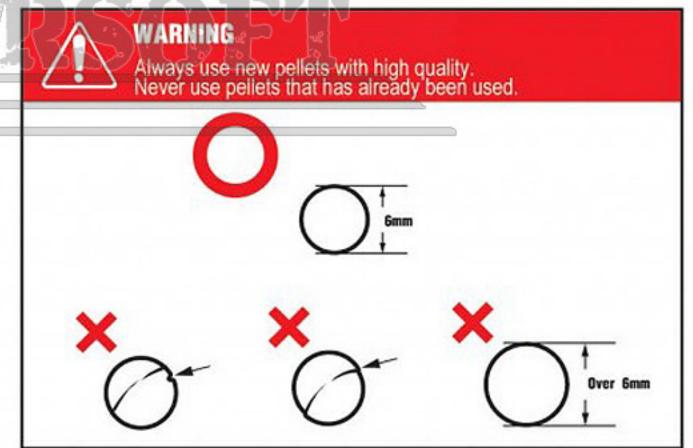



In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.





For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors.

Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland

Co. Name: Evolution International S.r.I

Add.: Via dell' Annunciata n.31, 20121 Milan, Italy

Tel: (39) 02 25459027 Fax: (39) 02 25118356

Email: info@evolution-airsoft.com Website: www.evolution-airsoft.com

Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia

Co. Name: ActionSportGames A/S

Add.:Bakkegaardsvej 304, DK-3050 Humlebaek, Denmark

Tel: (45) 89 28 18 88 Fax: (45) 49 19 31 60

Email: sales@actionsportgames.com Website:http://www.actionsportgames.com/

The United States of America

Co. Name: Spartan Imports, Inc.

Add.:213 Lawrence Avenue, S.San Francisco, California, USA 94080

Tel: (1) 650 589 5501 Fax: (1) 650 589 5552

Email: info@spartanimports.com Website:http://www.spartanimports.com/

Taiwan

Co. Name: F-Link Int'l Enterprise Co. Ltd.

Add.:3 Lane 62, Jianguo 1st Rd., Lingya District, Kaohsiung City 802, Taiwan, R.O.C.

Tel: (886) 7-710 0198 Fax: (886) 7-710 0398

Email: kssa.kssa@msa.hinet.net Website:http://www.soloman.com.tw/

Thailand

Co. Name: Voxtech Co., Ltd

Add.: 92 Kaset - Nawamintra Rd. Soi Ladplacow 39 Jorakebua Ladphrao Bangkok

Tel: +662 9402629 (auto 4 lines) / +668 1 8692117

Fax: +662 9402679

Email: polaris_adventure@yahoo.com Website: http://www.classicarmy-thailand.com

Japan

Co. Name: Union Fire Company (UFC)

Add.: 542-0067, 6-10-101, MATSUYAMACHI, CHUO-KU, OSAKA, JAPAN

Tel: +81-6-4304-7750 Fax: +81-6-4304-7799

Email: ufctrading@ufc-web.com/ Website: http://www.ufc-web.com/



