 
 


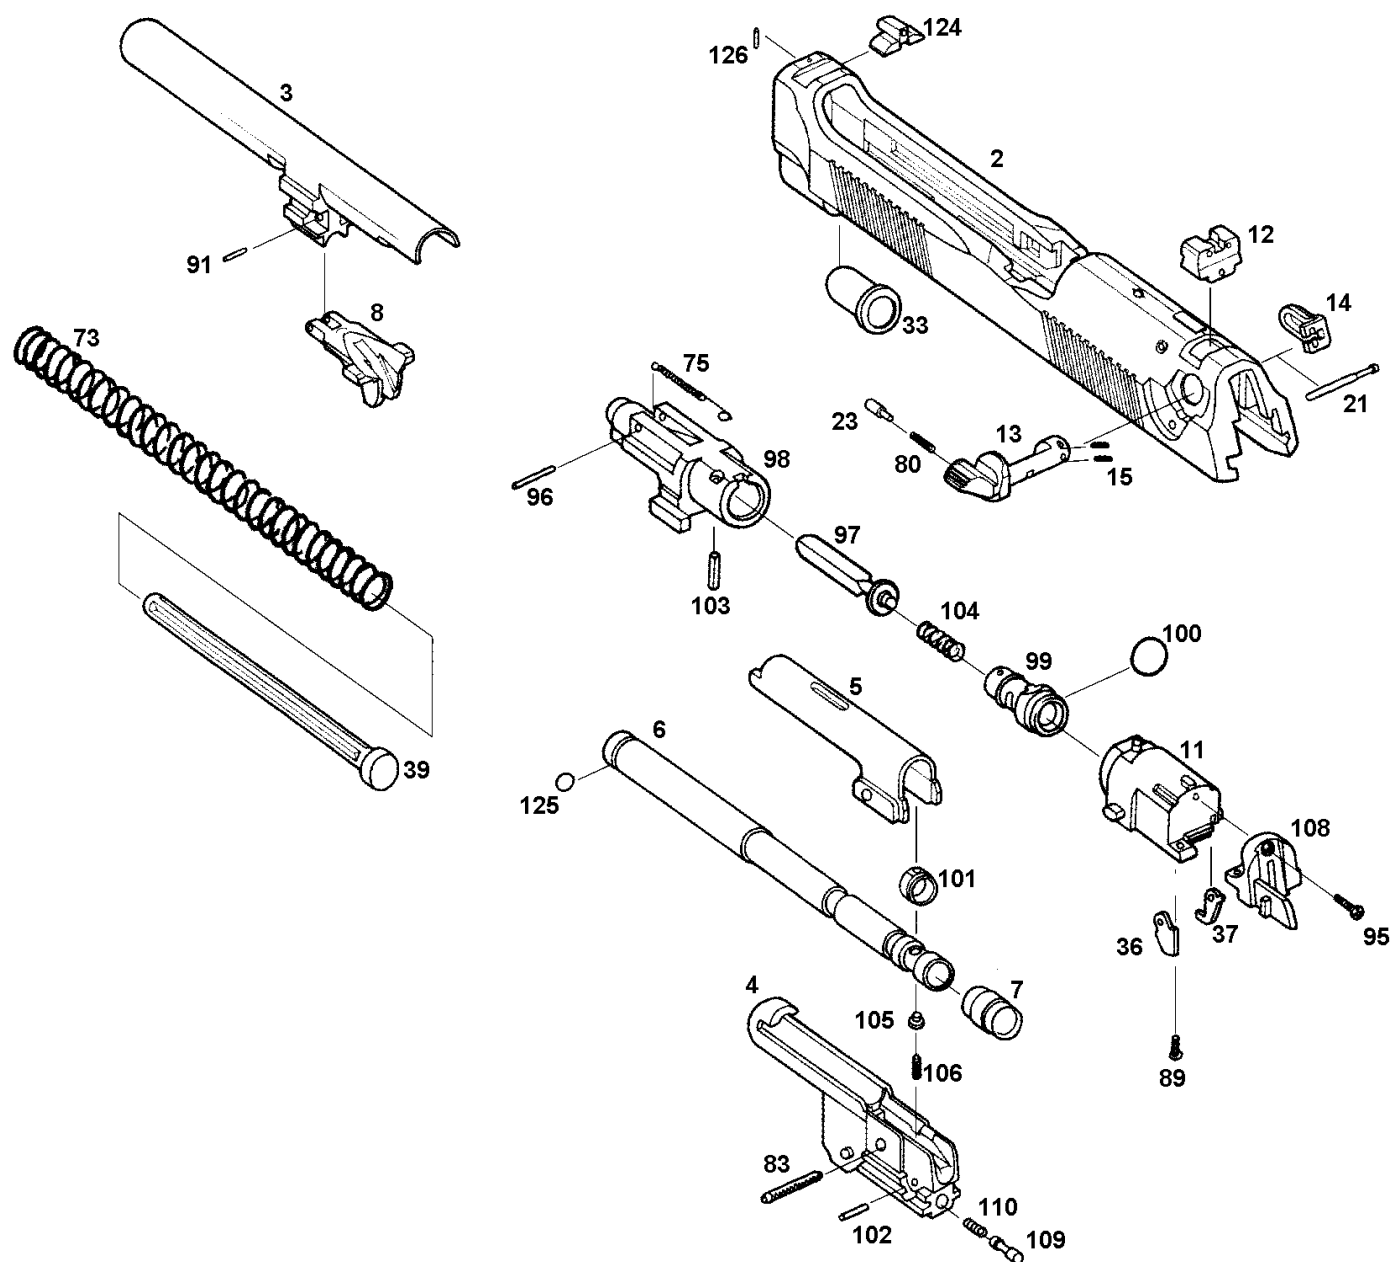

NO.	Parts No.	Parts Name	Price	NO.	Parts No	Parts Name	Price
2	BT-AE-002	slide HW	3,500	83	STD-162	barrel lock pin (3x14)	100
3	BT-AE-003	outer barrel (silver)	750	89	STD-441	breech screw	100
4	9204F	hop barrel guide F	800	91	STD-146	locking block pin (2x9)	100
5	9205	hop barrel lock	300	95	STD-442	backplate screw	100
6	BT-AE-006	elite inner barrel	2,600	96	STD-104	loading nozzle pin	100
7	8210	normal chamber	700	97	9880H	floating valve	500
8	BT-AE-008	locking block	400	98	9281	loading nozzle E	1,200
11	BTC-011	breech	800	99	9282	piston	700
12	BT-AE-012	CQB rear sight	700	100	STD-011	S-11.2	100
13	9212	safety lever E left	600	101	BT-AE-101	hop up rubber	300
14	BT-AE-014	safety lever right	500	102	STD-144	barrel guide plunger pin (2x7)	100
15	STD-202	safety screw L(M2x4)	40	103	STD-144	piston pin (2x7)	100
21	9819	safety guide	200	104	BT-AE-104	floating valve spring	200
23	9537	safety plunger	100	105	5208	lower plunger	200
33	BT-AE-033	slide weight	300	106	STD-230	hop adjust screw (M3x9)	100
36	9827B	hammer block B	200	108	BT-AE-108	back plate	500
37	9228F	decocking lever F	200	109	9295	barrel guide plunger	300
39	BT-AE-039	recoil spring guide	700	110	9296	barrel guide plunger spring	100
73	9260	recoil spring E	400	124	BT-AE-124	front sight	600
75	BT-AE-075	loading nozzle spring	200	125	BT-AE-125	barrel O-ring (9x7x1)	100
80	9558	safety plunger spring	100	126	STD-121	front sight lock pin (1.5x4)	40

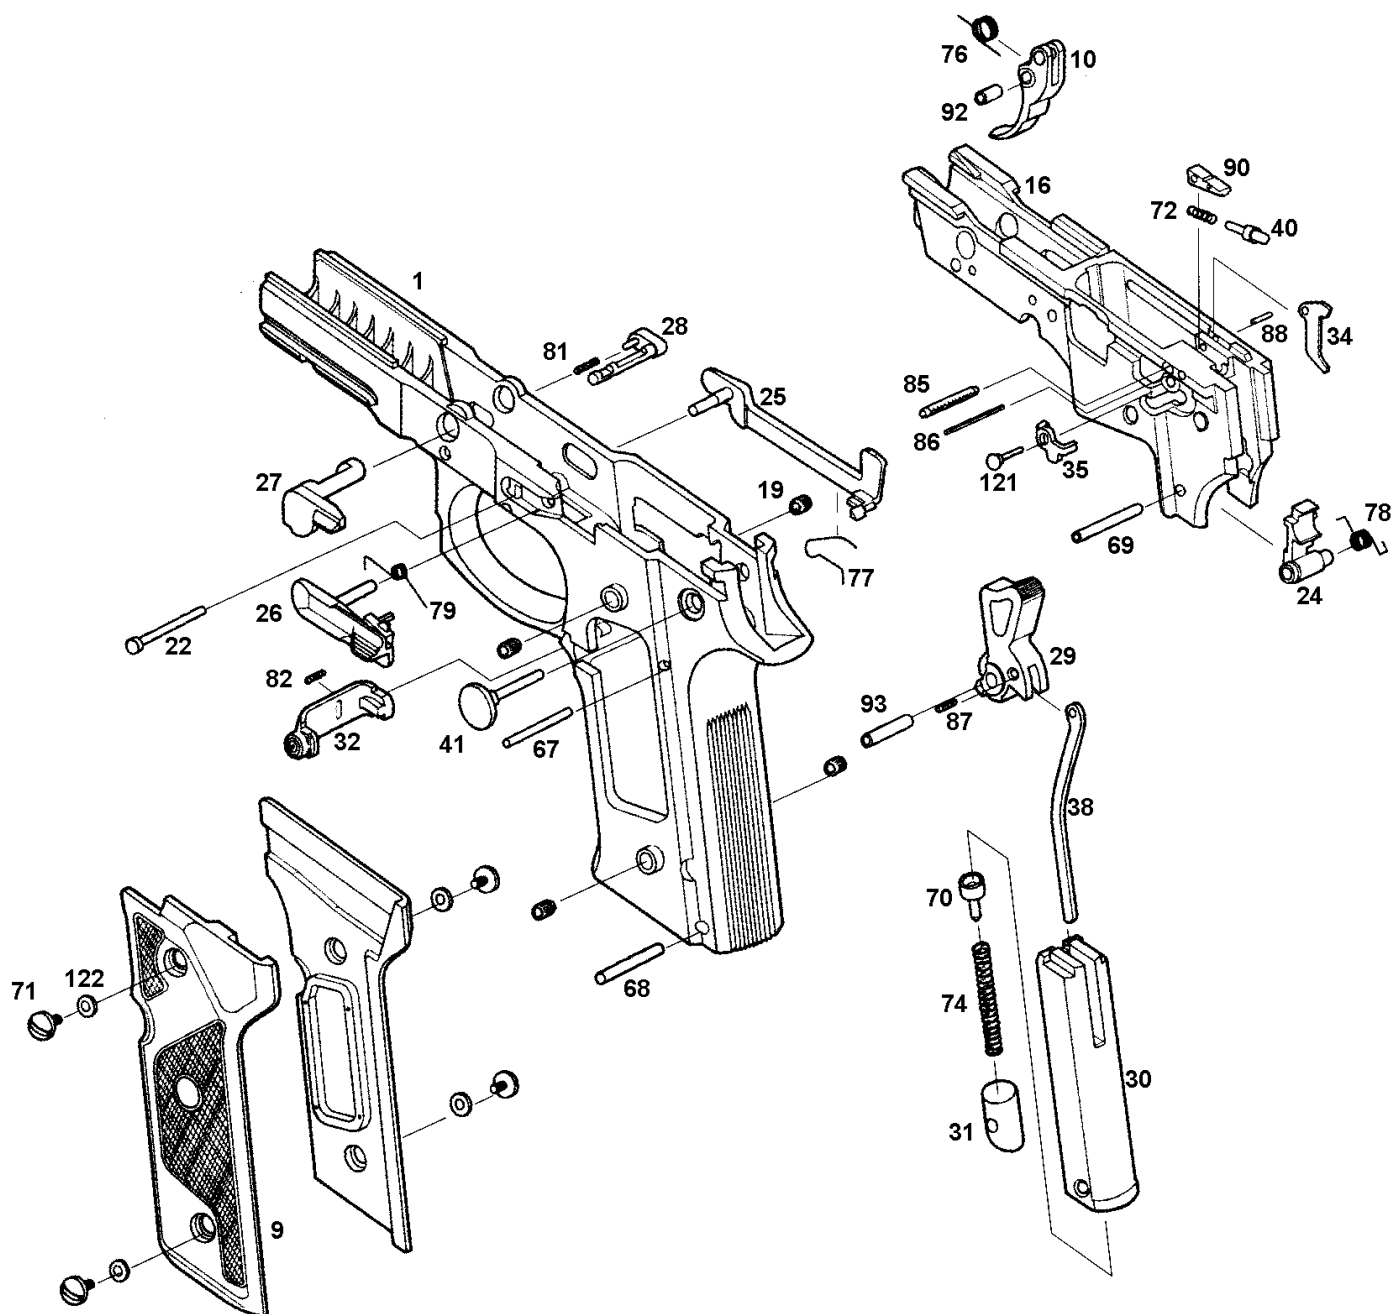

NO.	Parts No.	Parts Name	Price	NO.	Parts No	Parts Name	Price
1	BT-AE-001	frame HW	4,000	68	9544	main spring housing pin	100
9	BT-AE-009	grip	800	69	9546	sear sleeve	100
10	BT-AE-010	trigger	500	70	9857	cap	200
16	BT-AE-016	chassis	2,500	71	BTA-127	grip screw	100
19	PP-AA-19	grip screw nut	100	72	9859H	firing pin spring	200
22	9536	trigger pin	200	74	9861	main spring	300
24	9820	sear	300	76	BT-AE-076	trigger spring	200
25	BT-AE-025	trigger bar	500	77	BT-AE-077	trigger bar spring	200
26	BT-AE-026	slide stop	600	78	9865	sear spring	200
27	9511	disassembly lever	600	79	BT-AE-079	slide stop spring	200
28	9512	disassembly buttom	300	81	9558	disassembling buttom spring	100
29	BT-AE-029	hammer	800	82	BTA-135	magazine catch spring	100
30	BT-AE-030	main spring housing	800	85	STD-150	firing pin guide pin A (2x14)	100
31	BT-AE-031	main spring cap	300	86	STD-105	firing pin guide pin B (1x14)	40
32	BT-AE-032	magazine catch	500	87	STD-143	hammer strut pin (2x6)	40
34	9825	hammer release lever	300	88	STD-143	hammer release lever pin	40
35	9826	valve lock release lever	200	90	9874	firing pin guide	200
38	9532	hammer strut	200	92	BT-AE-092	trigger sleeve	100
40	9830N	firing pin	300	93	9876	hammer sleeve	100
41	9831	hammer pin	200	121	BT-AE-121	valve lock release pin	200
67	9545	sear pin	100	122	STD-566	grip screw washer	100

