

No,	Parts No	Parts name	Price (¥)	No,	Parts No	Parts name	Price (¥)
E1	9201	Frame HW	4,000	53	9843	Charging valve	700
F2	9202F	Slide F HW	3,500	E54	9244	Valve E	600
FC2	9292F	Slide F HW (centurion)	3,200	R56	STD-002	Valve O-ring front (S-3)	100
3	9803	Outer barrel	800	R57	STD-021	Valve O-ring rear (5x3x1)	100
C3	9823	Outer barrel (centurion)	740	E58	9248	Magazine plug E	600
F4	9204F	New hop barrel guide F	800	59	9563	Magazine packing	200
E5	9205	New hop barrel rock	300	R60	9850R	Large gas route	200
E6	9206	New plunger barrel	2,800	R61	STD-025	Sleeve O-ring front (9x7x1)	100
EC6	9206C	New plunger barrel (centurion)	2,400	E62	8659	Impact spring	200
E7	8210	Normal chamber	700	E63	9253	Valve lock spring E	100
8	9808	Locking block	400	E64	9254	Magazine plug packing E	200
9	9504	Grip (L/R set)	800	67	9545	Sear pin	100
10	9809	trigger	500	68	9544	Main spring housing pin	100
G11	9210G	Breech G	800	69	9546	Sear sleeve	100
E12	9211	Three dot rear sight	500	70	9857	Cap	200
E13	9212	Safety lever E (left)	600	71	9858	Grip screw	100x4
14	9813	Safety lever (right)	500	H72	9859H	Firing pin spring	200
15L	STD-203	Safety screw L (M2x4)	40 x 2	73	9260	Recoil spring E	400
E16	9216	Chassis set E	2,500	74	9861	Main spring	300
19	9217	New grip screw nut	100x2	H75	9862H	Loading nozzle spring	200
21	9819	Safety guide	100x2	76	9863	Trigger spring	200
22	9536	Trigger pin	200	77	9864	Trigger bar spring	200
23	9537	Safety plunger	200	78	9865	Sear spring	200
24	9820	Sear	100	79	9866	Slide stop spring	200
25	9821	Trigger bar	300	80	9558	Safety plunger spring	100
26	9822BV	Slide stop	500	81	9558	Disassembling button spring	100
27	9511	Disassembling lever	600	82	9559	Magazine catch spring	100
28	9512	Disassembling button	600	83	STD-162	Barrel lock pin (3x14)	100
29	9823BV	Hammer	300	85	STD-150	Firing pin guide pin A (2x14)	100
30	9514	Main spring housing	800	86	STD-105	Firing pin guide pin B (1x14)	40
31	9513	Lanyard loop	800	87	STD-143	Hammer strut pin (2x6)	40
32	9508	Magazine catch	500	88	STD-143	Hammer release lever pin (2x6)	40
33	9824	Slide weight	500	E89	STD-441	Breech screw (M2x5)	100
34	9825	Hammer release lever	300	90	9874	Firing pin guide	200
35	9826	Valve lock release lever	300	91	STD-146	Locking block pin (2x9)	100
B36	9827B	Hammer block B	200	92	9548	Trigger sleeve	100
F37	9228F	De-cocking lever F	200	93	9876	Hammer sleeve	100
38	9532	Hammer strut	200	94	9877	Hammer roller	100
39	9829	Recoil spring guide	800	E95	STD-441	Back plate screw (M2x5)	100
C39	9829C	Recoil spring guide (centurion)	740	96	STD-104	Loading nozzle pin (1x10)	100
40	9830N	Firing pin	300	H97	9880H	Floating valve	500
41	9831	Hammer pin	200	E98	9281	Loading nozzle E	1,200
E42	9232	Valve guide E	500	E99	9282	piston	700
E43	9233	Valve lock E	500	E100	STD-011	Piston O-ring (S-11.2)	100
E44	9234	Packing guide E	200	E101	9291	Hop up rubber	300
45S	9835S	Valve guide screw S	100	E102	STD-144	Barrel guide plunger pin (2x7)	100
F46	9236F	Magazine case F	2,500	103	STD-144	Piston pin (2x7)	100
F47	9237	Magazine base E	700	104	9887	Floating valve spring	200
F48	STD-151	Magazine base pin (2x20)	100x2	P105	9892P	Lower plunger 92	200
H49	9839H	25R magazine follower	300	E106	STD-230	Hop adjust screw (M3x9)	100
H50	9840H	25R magazine spring	300	107	9894	Valve lock release washer	40x2
E51	9241	Valve sleeve E	800	G108	9294G	Back plate G	500
R52	STD-026	Sleeve O-ring rear (10x8x1)	100	E109	9295	Barrel guide plunger	300
				E110	9296	Barrel guide plunger spring	100