



INSTRUCTION

AIRSPORT GUN

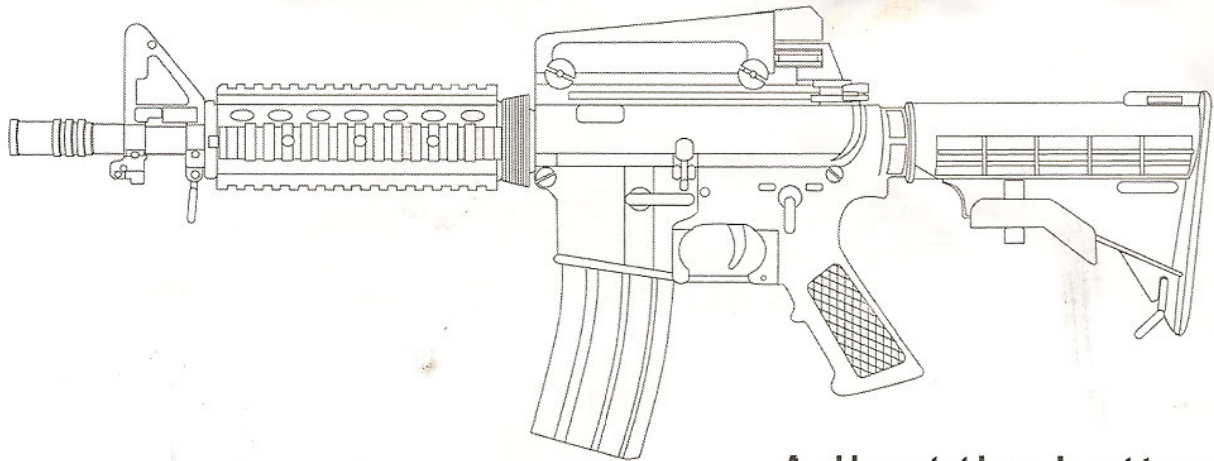


Adjust the button
to fix the handle


Install the handle

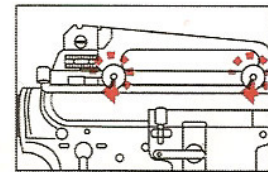

Adjustable button
of front aimer

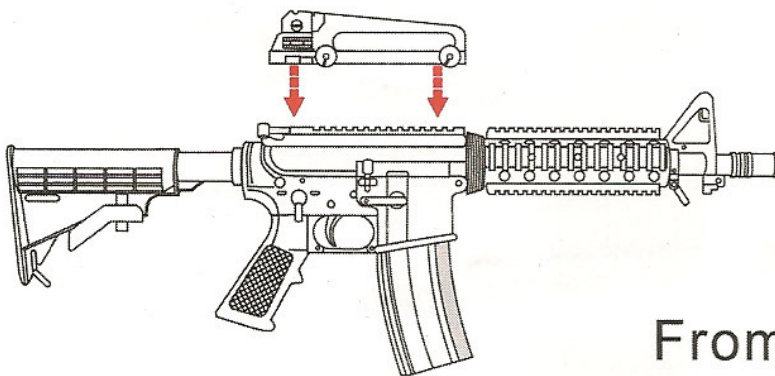


From top to
bottom

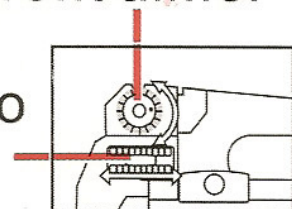


WARNING

Sale restricted to ADULTS ONLY, 18 years of age or older. Proof of age required at the moment of purchase. SALES PERSONNEL - CHECK PICTURE ID PRIOR TO SALE OF THIS PRODUCT. This soft-air gun is intended for recreational or training purposes. Do not aim or shoot at other people or domestic animal. Protective goggles and mouth protection MUST be worn when operating this SOF-TAIR gun by the user and any person within range. Misuse may cause serious injury, especially to the eyes. The owner/user should adhere to all federal and state laws governing the ownership and use of softair guns. CONSULT YOUR LOCAL LAW ENFORCEMENT AGENCY PRIOR TO USE. MISUSE OR UNSAFE USE MAY RESULT IN SEVERE INJURIES OR DEATH. THIS IS NOT A TOY. THIS IS AN AIR OPERATED SOFTAIR GUN 6 MM CALIBER INTENDED FOR USE ONLY BY ADULTS OR MINORS UNDER CLOSE ADULT SUPERVISION. READ THE INSTRUCTION MANUAL CAREFULLY BEFORE USE. ANY ALTERATION AS TO THE COLORATION AND/OR MARKING OF THIS PRODUCT TO MAKE THIS PRODUCT LOOK MORE LIKE A FIREARM IS DANGEROUS, MAY CAUSE CONFUSION, MAY BE MISTAKEN TO BE A REAL FIREARM BY LAW ENFORCEMENT OFFICERS OR OTHERS AND MAY BE A CRIME. IT IS DANGEROUS AND MAY BE A CRIME TO BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC. PARENTS MUST NOT ALLOW MINORS TO TAKE THIS PRODUCT TO SCHOOL. HAVING THIS PRODUCT AT SCHOOL MAY BE A CRIME.


Press button. slide the stock the button to best position then release

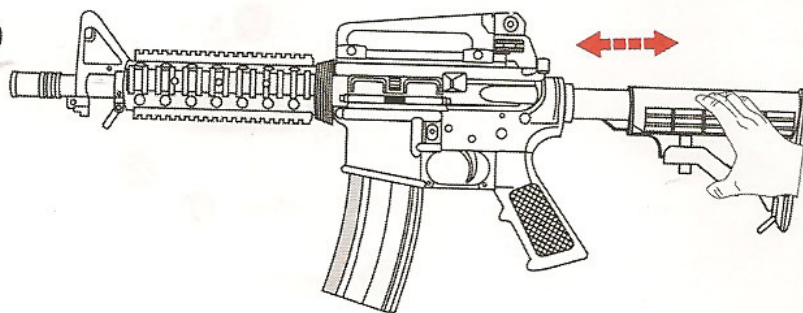


Best Position

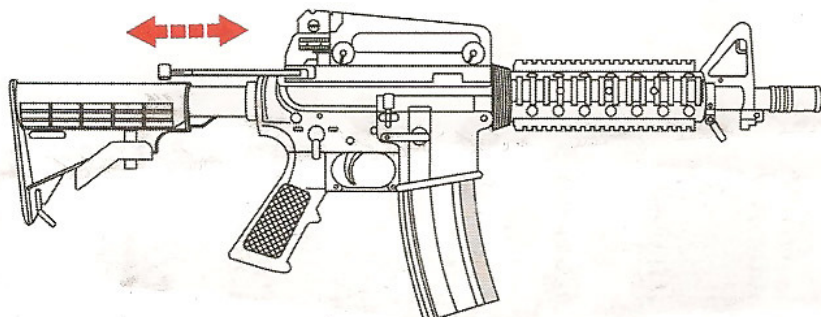


Press the hook and pull straight back

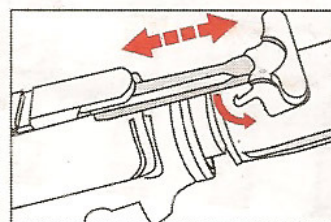



Refill the gas into magazine

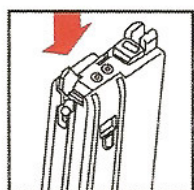

Press the before fill the gas

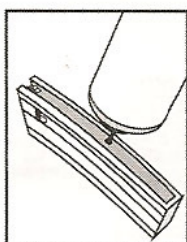


Feed the BB into magazine

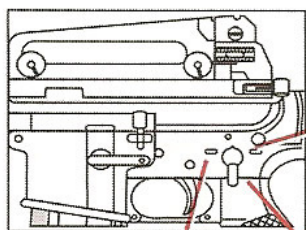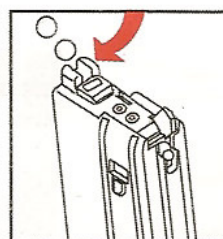


SEMI

AUTO


SAFE

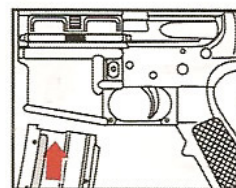

load magazine

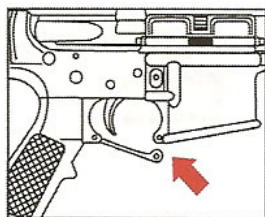


Slide reset button

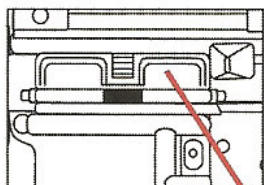


Browse window

This part can be disassembled

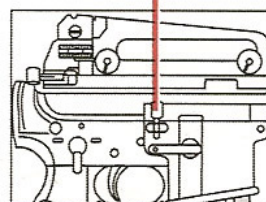


Pull out this part to dismantle receiver

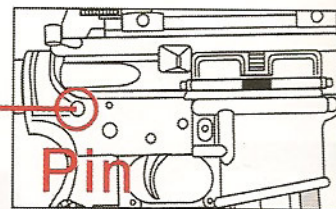

Excessive hop up


Best position

Not enough hop up

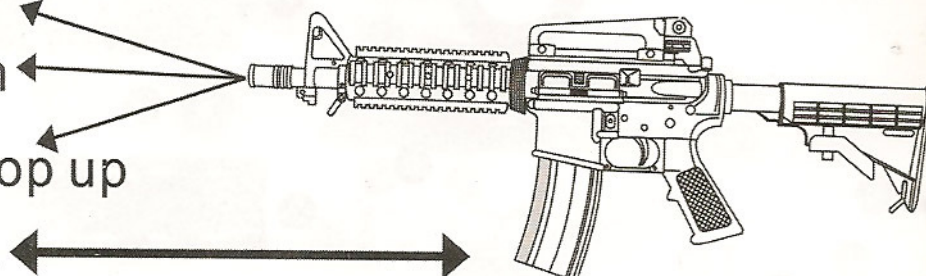

WARNING

Refill the gas with gas container in vertical position

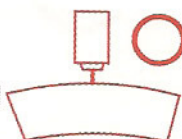


Common Faults

	Situation	Reasons	Approach
Operation failure	No action	Without gas/Insufficient gas	Refill the gas
	The trigger is out of work	Safety is locked	Release the safety
	Short projectile	The barrel was blocked by bullets	Remove the extra BB
			Clean the duty on the chamber
		The rubber seal is damaged	Change the rubber seal
	Blow back is out of work	The gas discharging mechanism is broken	Replacement of sprinkler
		The gas is frozen	Place the magazine to recover the pressure
Gaseous escape	The gas is frozen	Piston connector is broken	Change the piston connector
		The magazine can not load the bullets	Make sure the gas have been filled in magazine
		The gas is frozen	Place the magazine to recover the pressure
	No charge the gas into magazine	No press the value	press the value.refill the gas
		Poor lubrication	Wipe lubrication
	The gas leaks out	Poor lubrication	Wipe lubrication
		O-ring is broken	Change the O-ring



Always set ch lever to the safety position

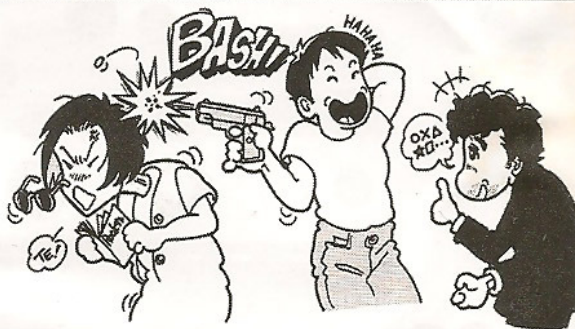

Never aim at the creature.



Keep out of reach of children



Wear eye protection to prevent serious injury to the eyes.



Do not lock inside the barrel.




Donot carry or display this product in public.




Do not disassemble or modify this product only use recommended gas.



Be careful to avoid rebounding

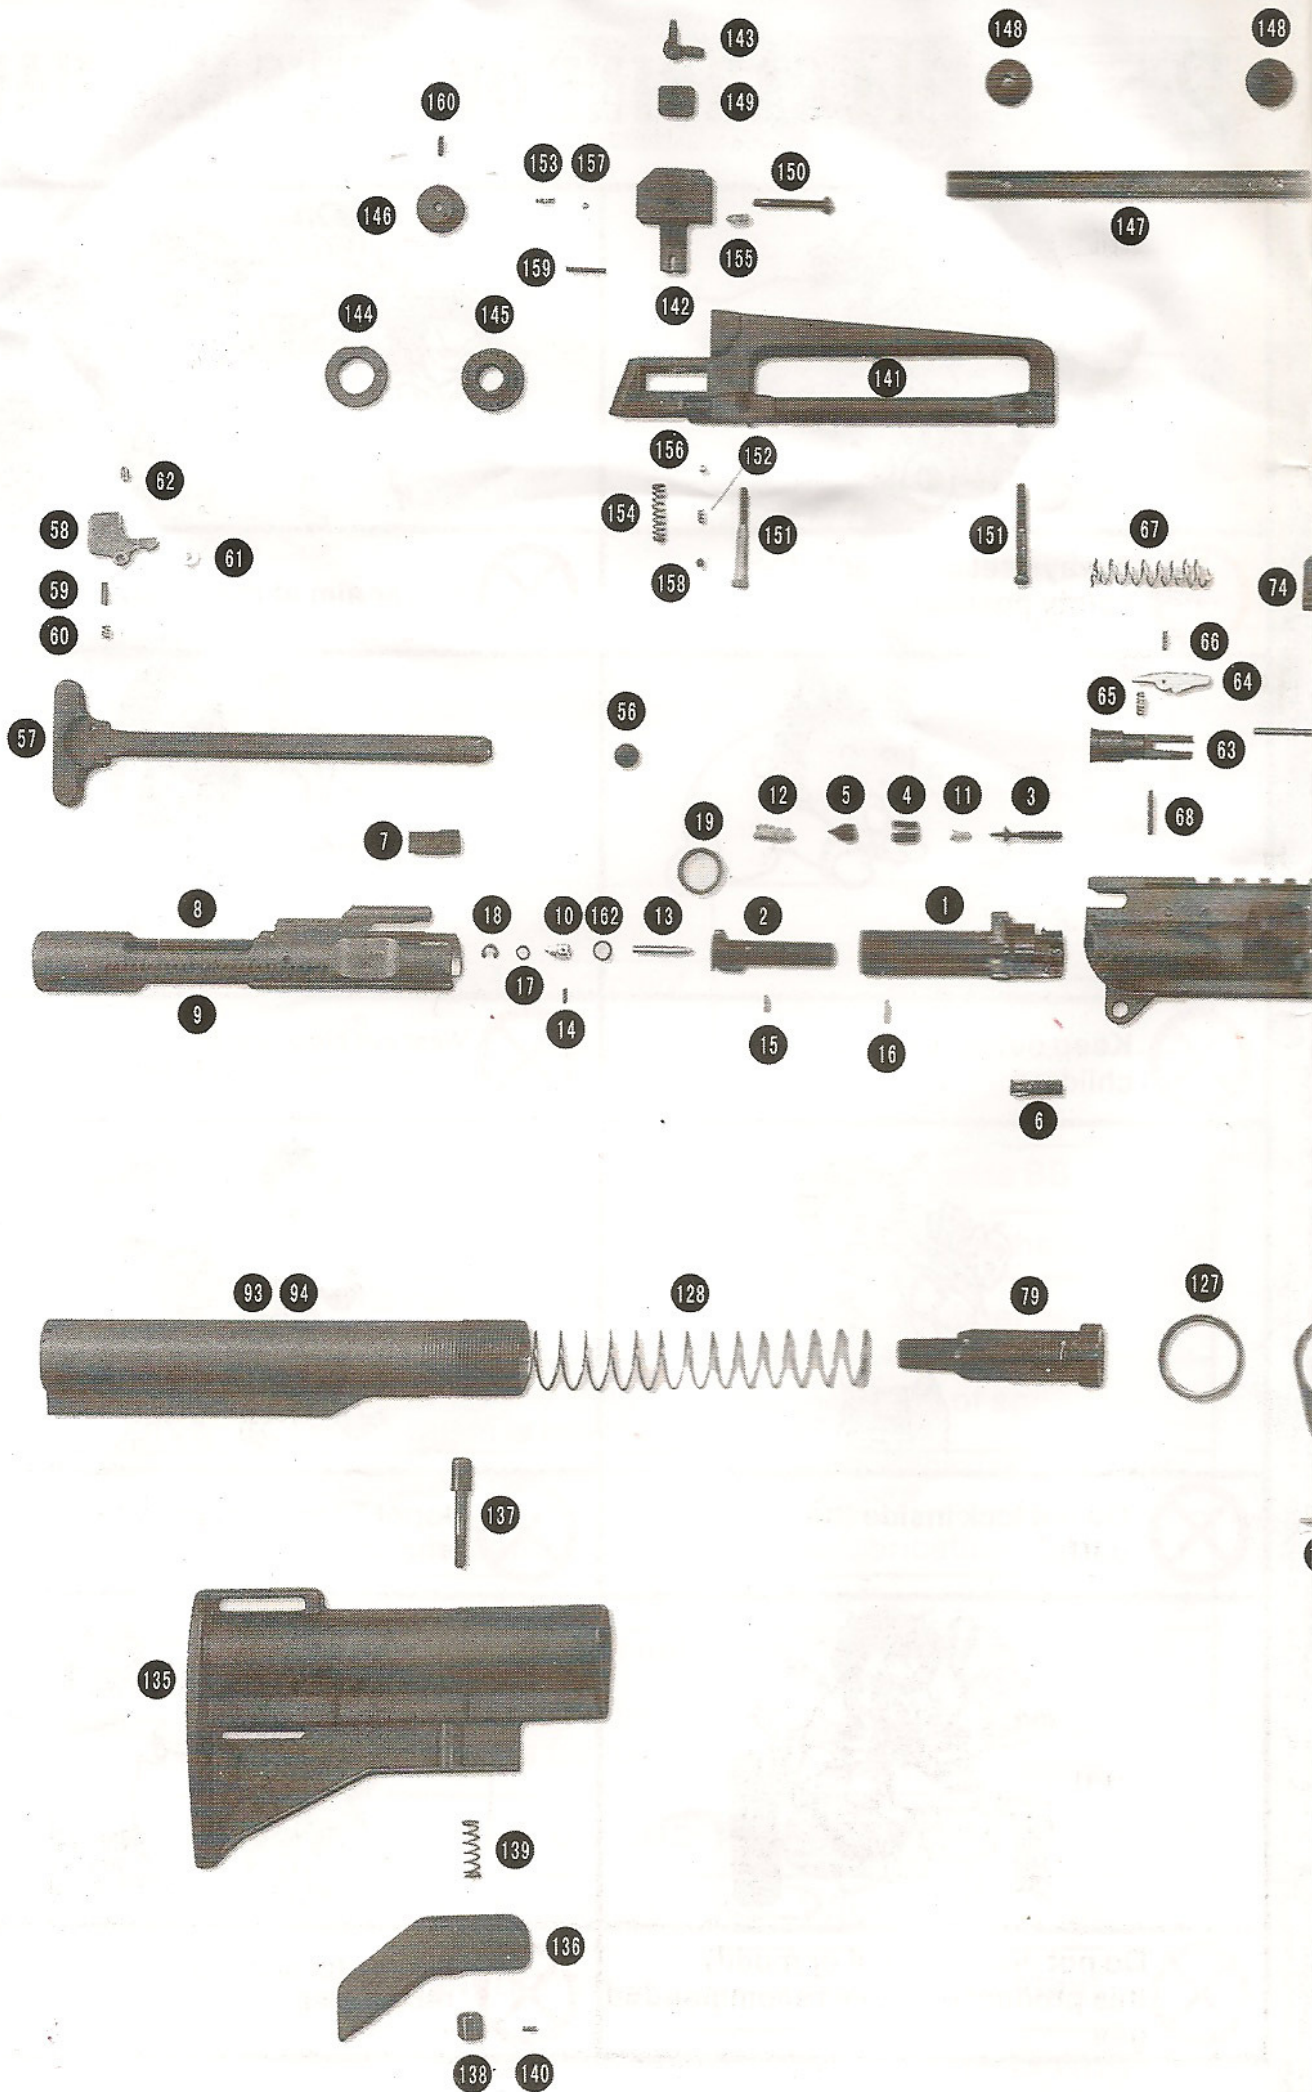

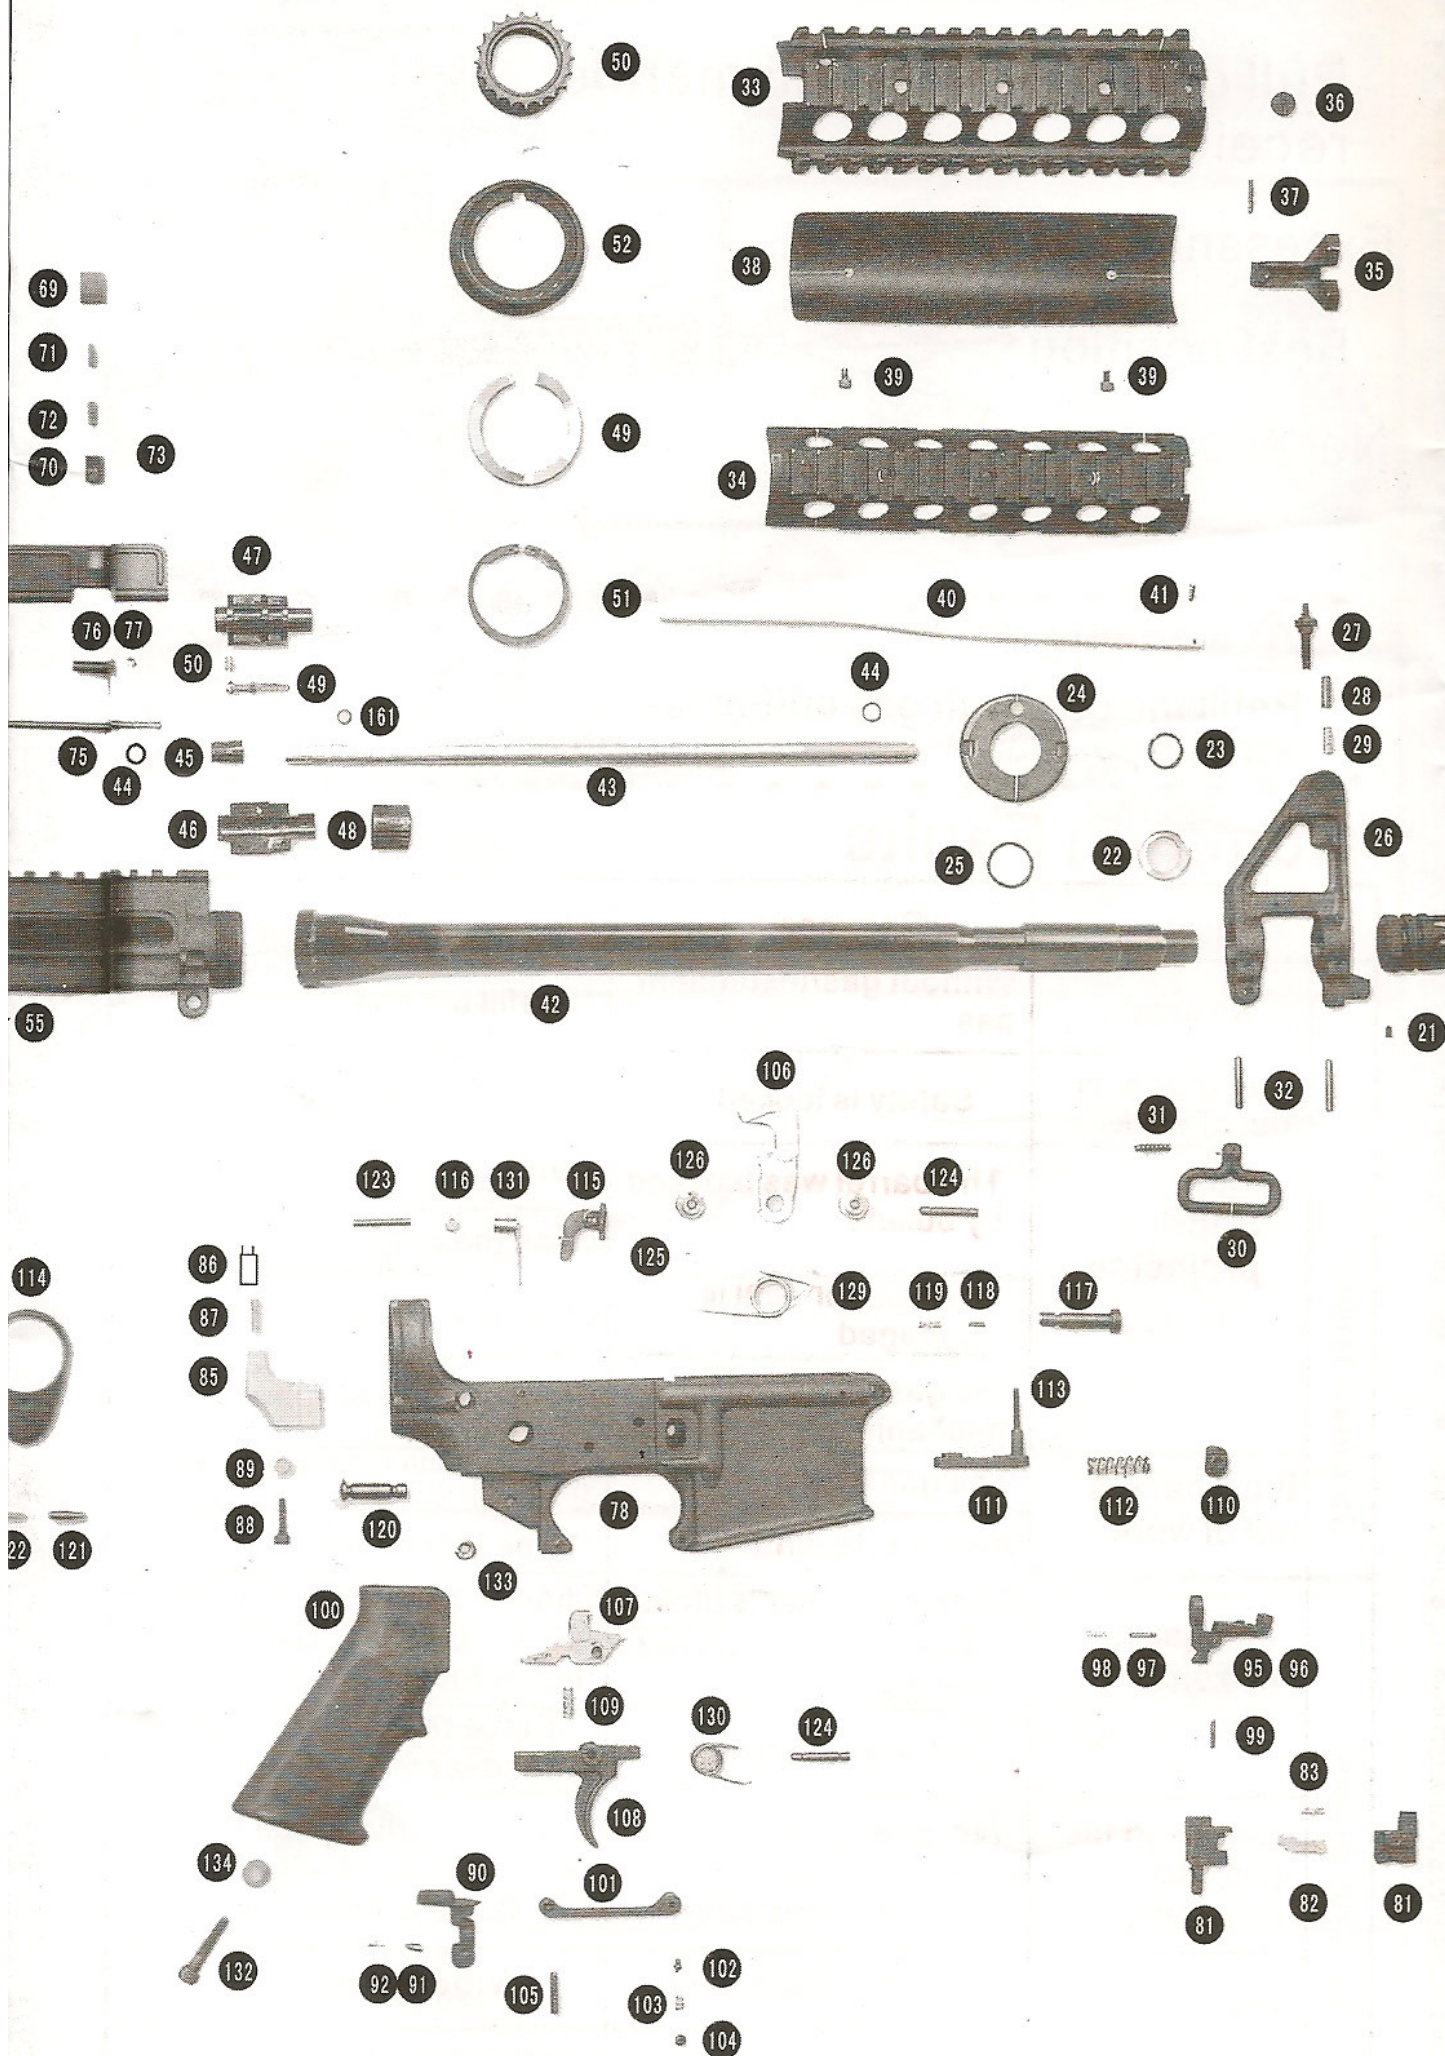

216

238

209

217

225

204

205

211

236

235

224

234

221

226

228

227

223

220

217

208

234

237

234

232

218

210

20

203

239

222

202

215

213

214

231

229

230

212

206

219

207

201

34

