


AR Bolt Action Conversion Kit

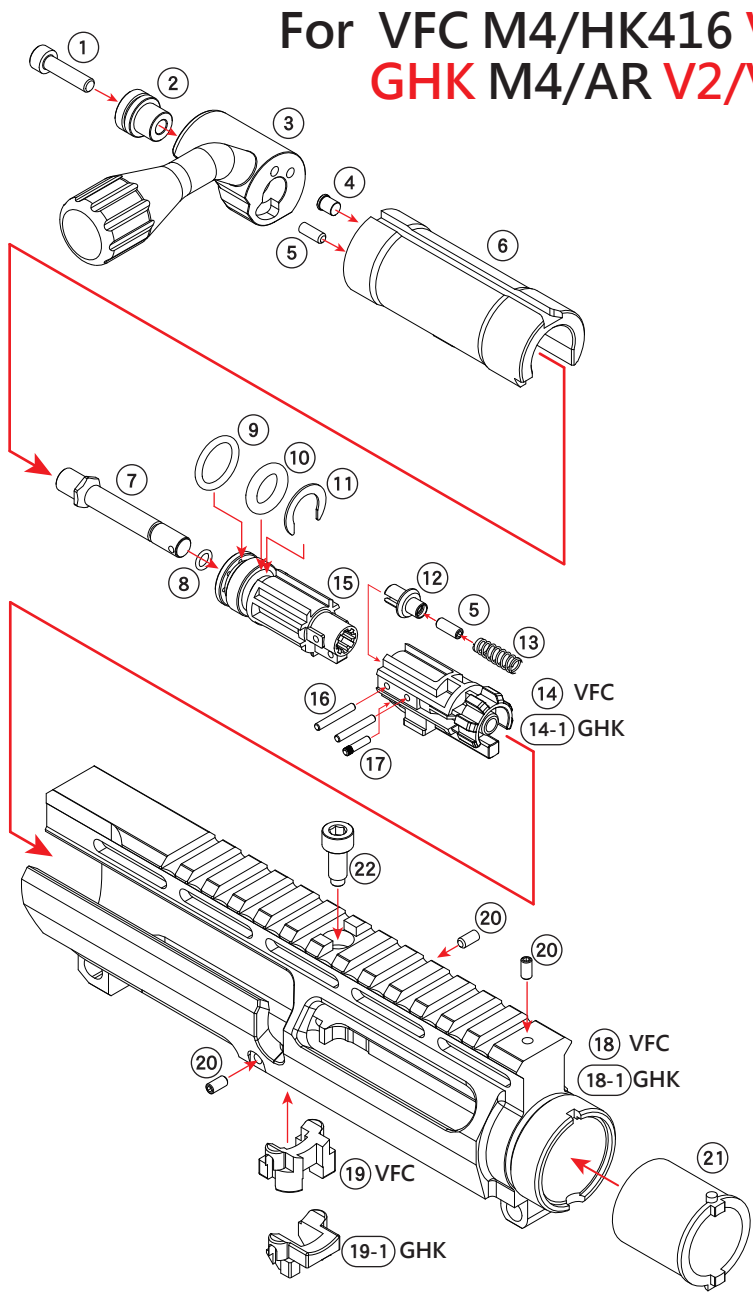

For Airsoft Only

Parts List

①	M4x16mm SHCS Screw	M4x16mm 內六角螺絲	SCHHM416	1 pcs
②	Bolt End Cap	槍機拉柄尾蓋	MLCBA001	1 pcs
③	Bolt handle	瓦斯槍機拉柄	MLCBA002	1 pcs
④	Ball-Plunger	彈簧定位珠	VSHS20T4	1 pcs
⑤	M3x8mm Set Screw	M3x8mm 帶膠止付螺絲	SCHNS308	1 pcs
⑥	Bolt Carrier	瓦斯槍機框	MLCBA003	1 pcs
⑦	ARBA Nozzle plug	ARBA 飛機結合座	MLCBA004	1 pcs
⑧	4x1 O-ring	4x1 橡膠O環	OR000041	1 pcs
⑨	13.1x1.6 O-ring	13.1x1.6 橡膠O環	OR013116	1 pcs
⑩	9x3 O-ring	9x3 橡膠O環	OR000093	1 pcs
⑪	Nozzle C-clip	飛機止擋C扣	MLCHM015	1 pcs
⑫	Adjustable Valve	蜂鳥短槍機-可調飛鏢	MLCHM017	1 pcs
⑬	Adjustable Valve Spring	蜂鳥短槍機-可調飛鏢彈簧	SPCT5354	1 pcs
⑭	Hummingbird Nozzle (VFC)	蜂鳥短槍機-飛機頭 (VFC)	MLCHMV19	1 pcs
⑭-1	Hummingbird Nozzle (GHK)	蜂鳥短槍機-飛機頭 (GHK)	MLCHMG19	1 pcs
⑮	Hummingbird Nozzle End	蜂鳥短槍機-飛機尾段	MLCHM018	1 pcs
⑯	2x14 Pin	2x14 插梢	MLCHM020	2 pcs
⑰	2x9 Pin	2x9 咬花插梢	MLCHM010	1 pcs
⑱	ARBA Upper Receiver (VFC)	ARBA 專用上機匣(VFC)	MLCBAV05	1 pcs
⑱-1	ARBA Upper Receiver (GHK)	ARBA 專用上機匣(GHK)	MLCBAG05	1 pcs
⑲	Hammer block (VFC)	擊錘限位塊 (VFC)	MLCBAV06	1 pcs
⑲-1	Hammer block (GHK)	擊錘限位塊 (GHK)	MLCBAG06	1 pcs
⑳	M3x6mm Set Screw	M3x6mm 帶膠止付螺絲	SCHNS306	3 pcs
㉑	M4 GBB Chamber Block (VFC)	M4 GBB 槍膛座(VFC)	MLCML444	1 pcs
㉒	Bolt Guide Screw	槍機定位螺絲	MLCBA007	1 pcs

Manufactured By Maple Leaf

AR Bolt Action Conversion Kit

Parts List

How to Install the Conversion Kit 如何安裝手動瓦斯槍機轉換套件



1.First, disassemble the takedown pins of VFC/GHK M4/AR15 GBB and separate the upper from lower receiver. (Make sure the mag is removed for safety reason.)

『Recommend Using VFC **V3** M4 / AR15/ HK416 GBB or **GHK V2/V3** M4/AR15 GBB』

1.將VFC/GHK M4/AR15 GBB，抽開前後機匣插梢，讓上下機匣分離。(為了安全理由請先移除瓦斯彈匣)

『推薦使用VFC **V3** 版本M4 / AR15/ HK416 GBB，或是**GHK V2/V3** M4/AR15 GBB』



2.Make sure the hammer is cocked and then install the conversion kit onto the M4/AR15 lower receiver with the gas bolt.


2.請確定擊錘為落下待擊狀態，之後將轉換套件槍機座與手動瓦斯槍機合上M4/AR15 GBB下機匣。



3.Assemble the takedown pins and the conversion kit is ready to use. Enjoy!!


3.將機匣前後插梢結合即可，便可開始使用本手動瓦斯槍機套件了，祝使用愉快!!

How to Adjust the Adjustable Valve 如何調整可調飛鏢

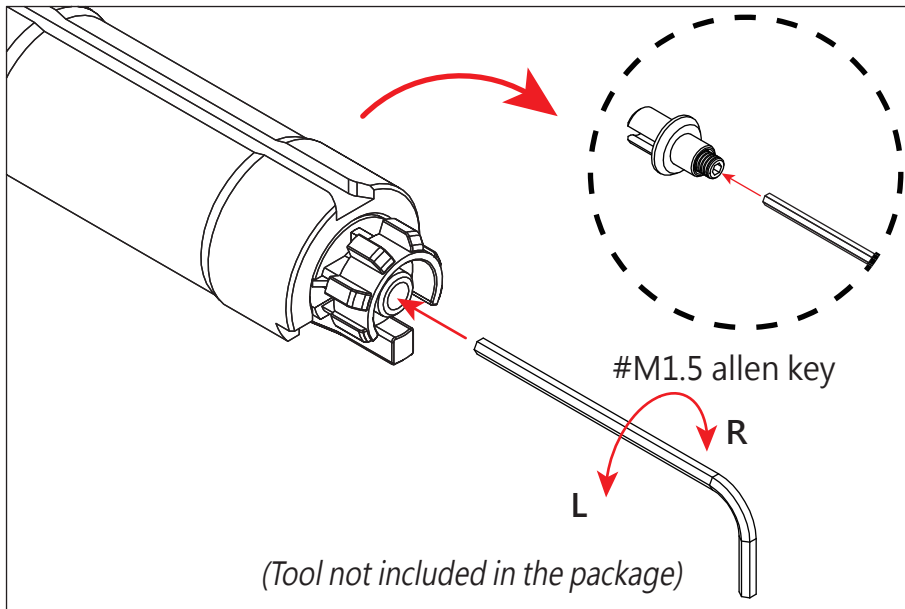

Insert the M1.5 allen key into the valve and rotate to adjust the velocity. Turn CLOCKWISE to decrease, Turn COUNTER-CLOCKWISE to increase. (tool not included in the package)

使用M1.5內六角棒工具，插入可調飛鏢並轉動他來調整初速，向右轉會降低初速，向左轉會增加初速。(產品包裝內不含工具)

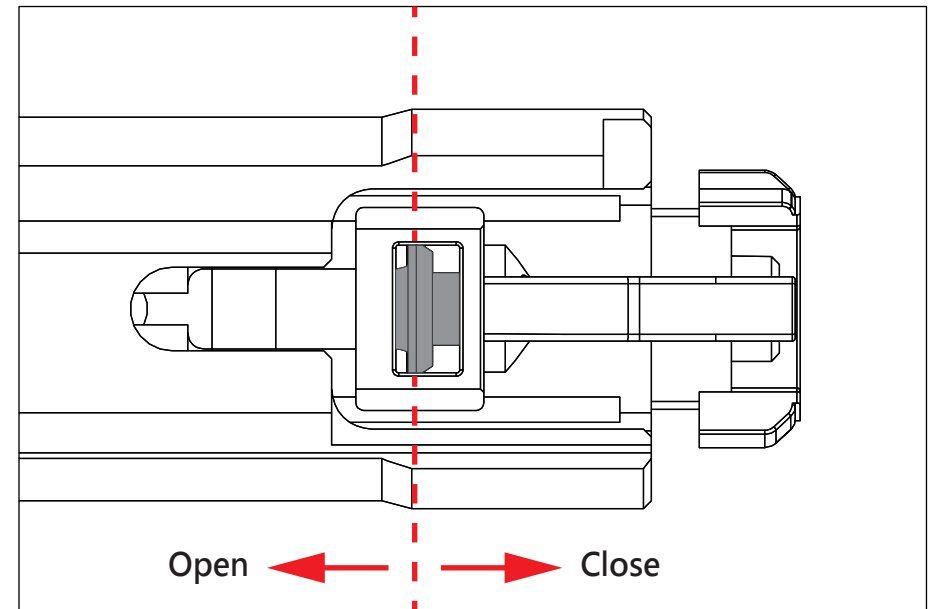

Adjust the valve and check the position of it, moving to right is closing, moving to left is opening. DO NOT over turn the screw or it will fall out and may damage the valve. PLEASE follow the local airsoft rules and velocity limits.

可由底下的進氣口觀察可調飛鏢位置，往右移動表示飛鏢關閉，往左移動表示飛鏢開啟。“請勿”過度轉動可調螺絲，避免螺絲掉出或是造成飛鏢損壞。請遵守當地Airsoft遊戲用槍規範及初速限制。